


SCISHARE

Instruction Manual SEMI-AUTOMATIC COFFEE MACHINE

S1181

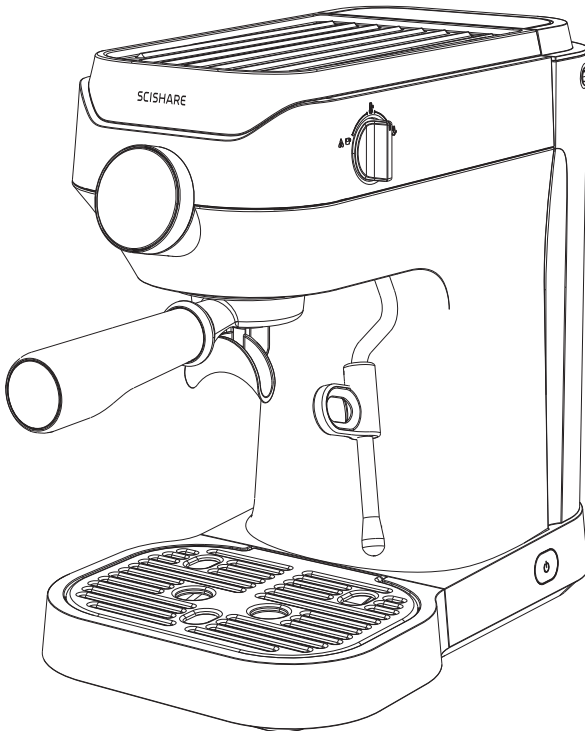

Thank you for purchasing the SCISHARE product.
To ensure you enjoy our fully support, please read this instruction manual before
using the product.If there are minor changes to the product,
please refer to the actual product.

CONTENT

CONTENT	_____	
SAFETY INSTRUCTIONS	_____	01
PRODUCT OVERVIEW	_____	02
TECHNICAL SPECIFICATIONS	_____	02
COMPONENTS	_____	02
INSTRUCTIONS FOR TOOLS BOX AND ACCESSORIES	_____	03
THE SCREEN DIAGRAM	_____	03
OPERATION AND USAGE INSTRUCTIONS	_____	04
FRIST USE	_____	04
MAKE SINGLE ESPRESSO	_____	05
MAKE DOUBLE ESPRESSO	_____	05
MAKE COLD BREW COFFEE	_____	06
MAKE TEA	_____	06
MAKE MILK FOAM	_____	07
COFFEE VOLUME	_____	08
COFFEE TEMPERATURE SETTING	_____	08
DESCALING	_____	09
FACTORY RESET	_____	09
ALARMS AND MALFUNCTIONS	_____	10
MAINTENANCE AND CLEANING	_____	11
AFTER USE CLEANING:	_____	11
COFFEE MACHINE CLEANING:	_____	11
MAINTENANCE PRECAUTIONS:	_____	11
TROUBLESHOOTING	_____	12
DISMANTLING	_____	13
ADDITIONAL WARNINGS	_____	14

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE.

1. Carefully read all instructions before operating and save for future reference.
2. Remove any packaging material and promotional labels or stickers before using the coffee.
3. To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of the coffee.
4. Do not place the coffee machine near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water and other substances
5. Do not place the coffee machine on or near a hot gas or electric burner, or where it could touch a heated oven.
6. Do not use the coffee machine on a metal surfaces, for example, a sink drain board.
7. Always ensure the coffee machine is properly assembled before connecting to a power outlet and operating.
8. Do not attempt to operate the coffee machine by any method other than those described in this book.
9. We recommend using cold, filtered water.
10. . We do not recommend the use of de-mineralized or distilled water as this may affect the taste of the coffee and how the machine is designed to function. Do not use any other liquid.

WARNING

To avoid the risk of injury, do not open the brew chamber during the brew process

11. Never use the espresso machine without water in the water tank.
12. Ensure the portafilter is firmly inserted and secured into the group head before using the machine.
13. Never remove the portafilter during the brewing operation as the machine is under pressure.
14. Do not touch hot surfaces. Use handles or knobs. Allow the coffee machine to cool down before moving or cleaning any parts.
15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
16. This appliance must be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance must not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
17. This appliance is recommended for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
18. It is recommended to regularly inspect the appliance. Do not use the appliance if the power cord, power plug, or appliance becomes damaged in anyway.
19. Always switch off the coffee machine by pressing the power button to off and unplug if appliance is to be left unattended, if not in use, before cleaning, before attempting to move the appliance, disassembling, assembling and when storing the appliance.
20. Keep the coffee machine and accessories clean. Follow the cleaning instructions provided in this book.
21. To protect against electric shock, do not immerse cord, plug or appliance in water or any other liquid.
22. Before cleaning and servicing, it is recommended to remove the plug from the main socket and let the appliance cool down.

WARNING

Fully unwind the cord before use.


FOR HOUSEHOLD USE ONLY, SAVE THESE INSTRUCTIONS

PRODUCT OVERVIEW

TECHNICAL SPECIFICATIONS


Model	S1181	Safegrade	Class I
Voltage	AC 220-240V, 50-60Hz, 1600W	Net Weight	4kg
Dimension	338X195X318mm	Water tank capacity	1.8L

COMPONENTS

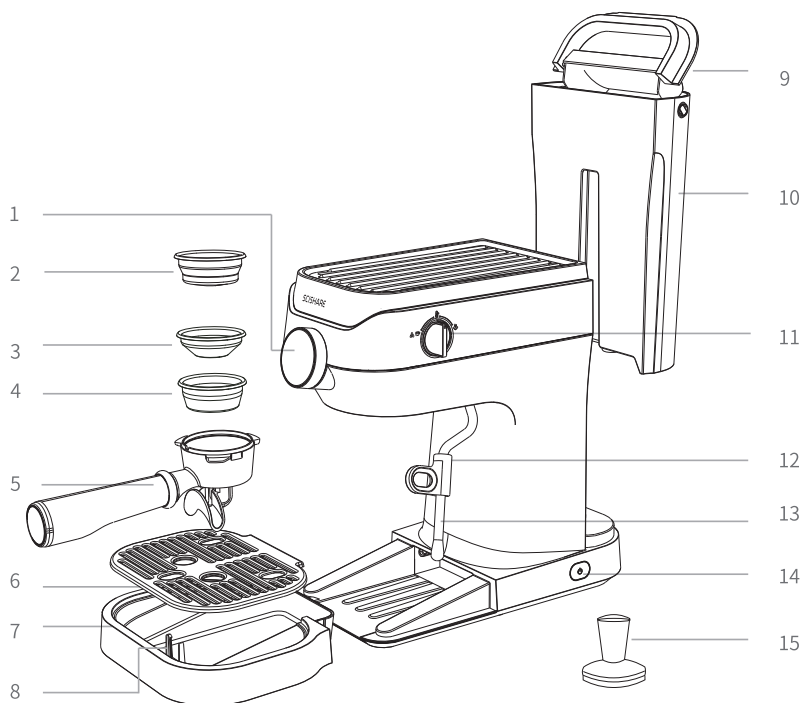


COMPONENTS

PRODUCT OVERVIEW

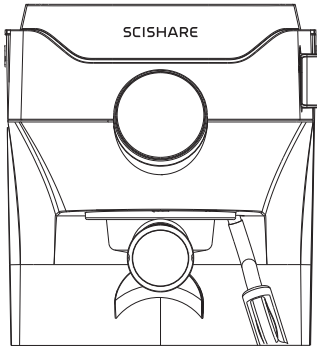

SCREEN KNOB

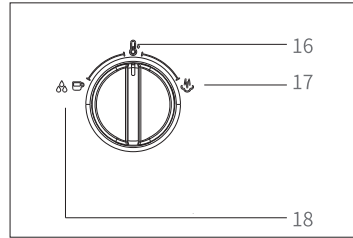

MODE KNOB

-
- | | | | | |
|----------------|-----------------------|----------------------|----------------------|----------------|
| 1. Screen Knob | 2. Pressurized Filter | 3. Single Cup Filter | 4. Double Cup Filter | 5. Portafilter |
|----------------|-----------------------|----------------------|----------------------|----------------|
-
- | | | | | |
|--------------------|---------------|--------------|---------------------------------|----------------|
| 6. Drip Tray Cover | 7. Float Buoy | 8. Drip Tray | 9. Water Tank Cover with Handle | 10. Water Tank |
|--------------------|---------------|--------------|---------------------------------|----------------|
-
- | | | | |
|---------------|--------------------------------|----------------|-------------------|
| 11. Mode Knob | 12. Steam Wand Silicone handle | 13. Steam Wand | 14. ON/OFF Button |
|---------------|--------------------------------|----------------|-------------------|
-
- | | | | |
|------------------------|------------------|----------------|-----------------|
| 15. Power Press Hammer | 16. Cooling Mode | 17. Steam Mode | 18. Coffee Mode |
|------------------------|------------------|----------------|-----------------|
-

INSTRUCTIONS FOR TOOLS BOX AND ACCESSORIES

The product comes with the following accessories: one press hammer, one portafilter, one single cup filter, one double cup filter, and one pressurized filter.

SCREEN KNOB



Single Espresso



Double Espresso



Cold Brew Coffee



Tea



Steam








Setting








OPERATION AND USAGE INSTRUCTIONS

FIRST USE

1. Before using for the first time, please remove all labels and packaging materials from the coffee machine, to be ensure that all accessories are complete and undamaged.
 - Clean the components and accessories (watertank, portafilter, filter, drip tray) with warm water and mild detergent. use a soft, cloth to dry the body and steam wand.
 - Place the product on a flat and stable surface
 - Ensure that the body and water tank are in the correct positions.
 - Do not immerse the body, power cord, or power plug in clean water or other liquids.
2. After the first use or after a long period of non-use.

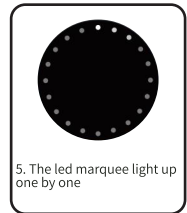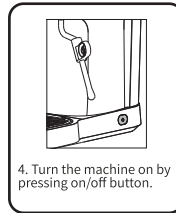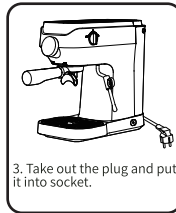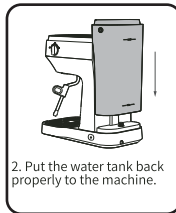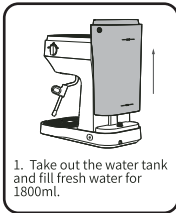

Note: The water level should be below the MAX water level line and above the MIN water level line.

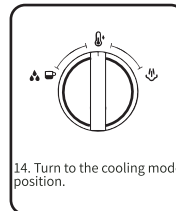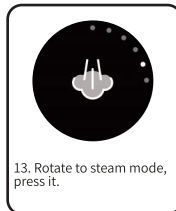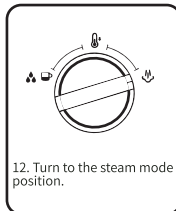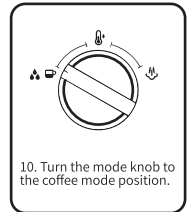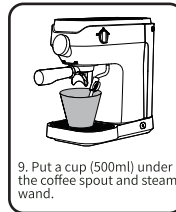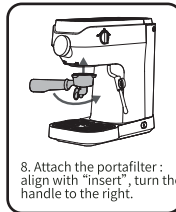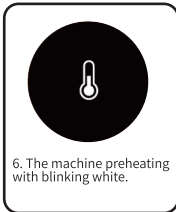

Note:

After Steam operation, it cannot brew coffee or make steam immediately. Please turn the Mode Knob to the cooling mode, cooling will be fast.


OPERATION AND USAGE INSTRUCTIONS

MAKE SINGLE ESPRESSO




Single Cup Filter


1. Place the single cup filter in the portafilter.

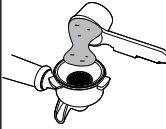


2. Fill the filter with Coffee powder (about 10g).

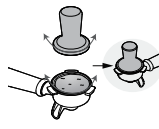


3. Flatten and compact the coffee. The coffee should be level with the max line.

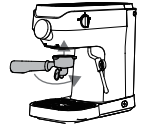

4. Clean the excess coffee and rotate the portafilter to the machine.



 
5. Place the cup under the portafilter coffee spouts.



6. Turn to the coffee mode position.



7. Rotate to single espresso mode and press it.



Turn

Please turn the mode knob to the right position and press the screen knob.



8. Display extraction progress. If you want to stop it, press the screen knob again.



Enjoy!


9. When the single espresso finishes, it shows "enjoy!"

MAKE DOUBLE ESPRESSO




Double Cup Filter


1. Place the double cup filter in the portafilter.

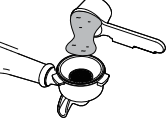

2. Fill the filter with Coffee powder (about 18g).

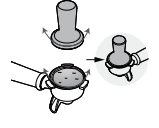


3. Flatten and compact the coffee. The coffee should be level with the max line.

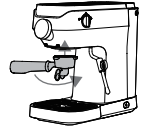

4. Clean the excess coffee and rotate the portafilter to the machine.



 
5. Place the cup under the portafilter coffee spouts.



6. Turn to the coffee mode position.



7. Rotate to double espresso mode and press it.



Turn

Please turn the mode knob to the right position and press the screen knob.



8. Display extraction progress. If you want to stop it, press the screen knob again.



Enjoy!

9. When the double espresso finishes, it shows "enjoy!"

OPERATION AND USAGE INSTRUCTIONS

MAKE COLD BREW COFFEE

Double Cup Filter

1. Place the double cup filter in the portafilter.
2. Fill the filter with Coffee powder (about 18g) .
3. Flatten and compact the coffee. The coffee should be level with the max line.
4. Clean the excess coffee and rotate the portafilter to the machine.
5. Place the cup under the portafilter coffee spouts.

6. Turn to the coffee mode position.

7. Rotate to cold brew mode and press it.

Turn

8. Display extraction progress. If you want to stop it, press the screen knob again.

9. When the cold brew Finishes, it shows "enjoy!"

Notes:

Before filling the portafilter with coffee grounds, please ensure there are no coffee residues (leftover impurities from previous brewing) inside the portafilter.

Do not remove the handle while the coffee machine is extracting coffee to avoid splashing.

Please wait a few seconds after extraction before removing the handle.

MAKE TEA

Double Cup Filter

1. Place the double cup filter in the portafilter.
2. Fill the filter with tea (about 18g) .
3. Flatten and compact the tea. The tea should be level with the max line.
4. Clean the excess coffee and rotate the portafilter to the machine.
5. Place the cup under the portafilter coffee spouts.

6. Turn to the coffee mode position.

7. Rotate to tea mode and press it.









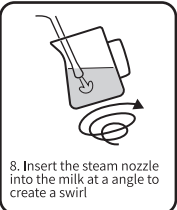
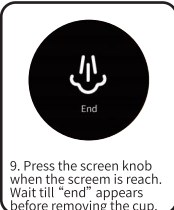
Turn

8. Display extraction progress. If you want to stop it, press the screen knob again.





9. When the tea Finishes, it shows "enjoy!"

OPERATION AND USAGE INSTRUCTIONS

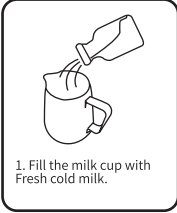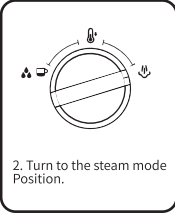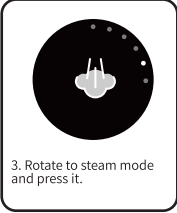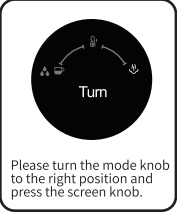MAKE MILK FOAM

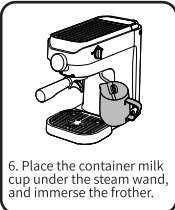 <p>1. Fill the milk cup with Fresh cold milk.</p>	 <p>2. Turn to the steam mode Position.</p>	 <p>3. Rotate to steam mode and press it.</p>	 <p>Please turn the mode knob to the right position and press the screen knob.</p>	 <p>4. If the temperature is not ok for steaming, it will preheat again.</p>
 <p>5. If the temperature is ok, it shows the "ready".</p>	 <p>6. Place the container milk cup under the steam wand, and immerse the frother.</p>	 <p>7. Pressing the screen knob It starts to steam.</p>	 <p>8. Insert the steam nozzle into the milk at a angle to create a swirl</p>	 <p>9. Press the screen knob when the screen is reach. Wait till "end" appears before removing the cup.</p>

"If you don't press the screen to stop the steam, it will automatically stop after one minute. If you want to continue brewing coffee immediately after steaming milk, it is recommended to turn the mode knob to the cooling mode to cool down the machine."

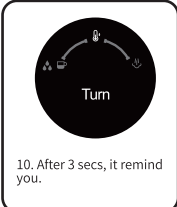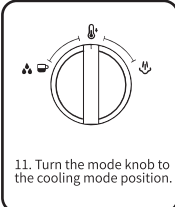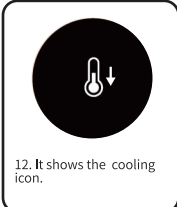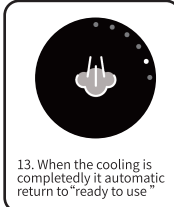
 <p>10. After 3 secs, it remind you.</p>	 <p>11. Turn the mode knob to the cooling mode position.</p>	 <p>12. It shows the cooling icon.</p>	 <p>13. When the cooling is completely it automatic return to "ready to use"</p>
---	--	--	--

Clean Steam Wand :

After each use, please wipe the remaining milk on the steam wand with a soft. Damp cloth promptly to avoid milk scale.

OPERATION AND USAGE INSTRUCTIONS

CUP VOLUME SETTING

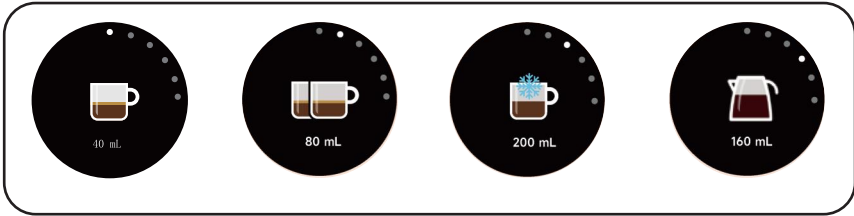

Under single/double espresso/cold brew coffee/tea mode, long press the screen for 3 seconds to enter "volume settings".

COFFEE MODE DEFAULT CUP VOLUME AND ADJUSTMENT RANGE:


COFFEE MODE	DEFAULT VOLUME	ADJUSTABLE VOLUME RANGE	ADJUSTMENT INTERVAL
SINGLE ESPRESSO	40mL	20-60mL	5mL each
DOUBLE ESPRESSO	80mL	60-110mL	10mL each
COLD BREW COFFEE	200mL	180-220mL	20mL each

BREWING FUNCTION DIVIDED INTO THREE STAGES OF WATER OUTPUT, EACH STAGE'S CUP VOLUME AND PAUSE INTERVAL TIME AS FOLLOWS:

Presets Menu	Default Volume and Pause Time	Volume Adjustment Options	Pause Interval Time Options
Segment 1	40mL, pause interval 10s	20mL/40mL/60mL	0 / 5s / 10s / 15s
Segment 2	60mL, pause interval 10s	40mL/60mL/80mL	0 / 5s / 10s / 15s
Segment 3	60mL	60mL/80mL/100mL	/




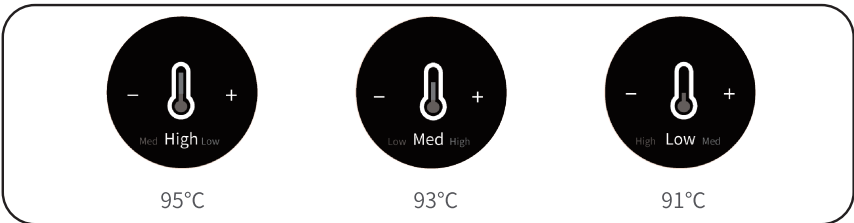 


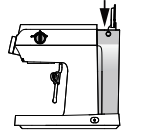



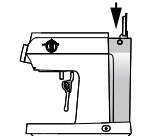



COFFEE TEMPERATURE SETTINGS:

The extraction temperature can be adjusted in three levels: Low/Med/High. To set the desired temperature, simply rotate the screen to the corresponding level and press the screen to confirm. High represents high temperature (95°C), Med represents medium temperature (93°C), and Low represents low temperature (91°C).






OPERATION AND USAGE INSTRUCTIONS

DESCALING

 <p>1. Turn to the coffee mode Position.</p>	 <p>2. Rotate to settings and press it.</p>	 <p>Note: if descaling alarm blinks orange, press the screen knob.</p>	 <p>Please turn the mode knob To the right position and Press the screen knob.</p>	 <p>3. Rotate to descaling mode And press it.</p>
 <p>4. It shows the descaling in orange.</p>	 <p>5. Fill the water tank with fresh water to the max level Pour a descaling agent into the water tank.</p>	 <p>6. Place a container with a min capacity of 1000ml under the coffee spout and hot water spout.</p>	 <p>7. When you finish the preparation, press the screen knob to start the descaling process.</p>	 <p>8. When it shows change the water, the water stops coming out from the coffee spout and hot water spout</p>
 <p>9. Empty the water tank and clean it. Fill the water tank with fresh water to the max level(approx.1800ml).</p>	 <p>10. Empty the container, and place it under the coffee spout and hot water spout again.</p>	 <p>11. When you finish the preparation, press the screen knob to continue the descaling process.</p>	 <p>12. When it finishes the descaling, it shows "done!"</p>	


1. In descaling mode, short-press the screen to pause descaling, press again to resume descaling.
2. To exit descaling mode, long-press the screen for 3 seconds to exit the descaling program.

RESET FACTORY SETTINGS

 <p>1. Rotate to settings and press it.</p>	 <p>2. Rotate to reset and press it.</p>	 <p>3. When it finishes the reset, it shows "finish"</p>
---	---	---

OPERATION AND USAGE INSTRUCTIONS

ALARMS AND MALFUNCTION

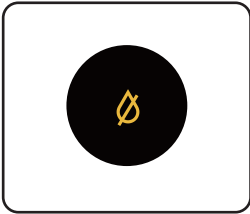

Water Shortage Alarm

When the water in the tank is insufficient, the "water shortage icon" is displayed and flashes orange.

Please fill the tank with purified water.


Press the screen button to cancel this alarm.

After the machine returns to the "ready to use" mode, empty a cup of clear water.

When using too fine coffee powder for extraction and the water tank is not empty, if the coffee does not come out or drip, the screen displays the water shortage icon and flashes orange.

Cancel the extraction, remove the stainless steel handle and pour out the coffee puck;

use coarser coffee powder for extraction.

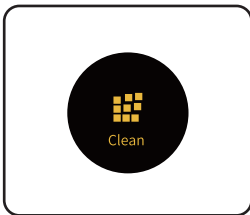


Descaling Alarm

When the coffee machine has extracted 300 cups, the screen displays the "clean" icon and flashes orange.

You can press the screen for more than 3 seconds. It will return to the "ready to use" mode (but the descaling alarm will appear again after each use.)

after descaling is completed, this alarm will no longer be displayed.

(please follow the instructions on page 09 for "cleaning mode" operation)

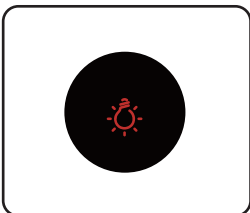

NTC FAULT ALARM

When the ntc of the machine fails, the ntc fault icon is prompted, and the machine cannot work.

Please turn off the machine, wait for 2 minutes, and then turn it on again.

If the problem still exists, please contact customer service.

CLEANING

AFTER USE CLEANING:

Remove the filter basket from the stainless steel handle;
Rinse the filter basket under running water;
Ensure that the holes are not clogged. If necessary, clean with a large needle;
Wipe all parts dry with a cloth;
Place the filter basket back into the stainless steel handle.

COFFEE MACHINE CLEANING:

Remove and empty the drip tray and water tank;
Clean with water and wipe dry with a soft cloth;
Clean the exterior of the machine with a damp cloth.

MAINTENANCE PRECAUTIONS:

Before cleaning, make sure the product plug has been unplugged.
To avoid electric shock, do not immerse the power cord, plug, or product in water or any other liquid.
Do not use metal objects to remove scale or coffee deposits, as they may scratch the metal or plastic surface.
The drip tray is equipped with a water level float (yellow) to indicate the water level. When the float protrudes from the drip tray, it must be emptied and cleaned; otherwise, water may overflow and damage the product, the surface on which the product is placed, or the surrounding area.

TROUBLESHOOTING

**IF THE MACHINE IS NOT WORKING PROPERLY,
PLEASE MAKE THE SIMPLE CHECKS SET OUT AS FOLLOWS:**

Problem	Possible Cause	Solution
The espresso coffee drips from the edges of the portafilter rather than the holes.	The portafilter has been inserted incorrectly.	Clean and re-insert the portafilter.
	Excessive ground coffee in the filter.	Add proper amount of ground coffee and tamp firmly until the shoulder of the tamper is level with the top of the filter.
	The holes of the 1 cup of 2 cups filter are blocked.	Remove the powder bowl and clean it.
	The group head is dirty with ground coffee that weakens the sealing between the group head and the portafilter.	Clean the group head silicone sealing.
No espresso coffee comes out.	No water in the tank.	Fill the tank.
	Water tank not installed correctly.	Remove the water tank and install it correctly.
	The holes in the portafilter are blocked.	Clean the filter holes.
	Limescale in the water circuit.	Descale as described in section “Descaling” .
The portafilter can not be attached to the machine.	Excessive ground coffee in the filter.	Add proper amount of ground coffee and tamp firmly until the powder cake is level with the MAX line.
The coffee Crema is too thin and pale. (the coffee flows too quickly out of the spouts)	The ground coffee is not pressed down firmly enough.	Press the ground coffee more firmly.
	The ground coffee bed after tamping is lower than the fill line.	Add proper amount of ground coffee and tamp firmly until the powder cake is level with the MAX line.
	The ground coffee is too coarse.	Press the ground coffee more firmly.
	The wrong type of ground coffee is being used.	Change the type of ground coffee.

The coffee crema is too dark (the coffee flows too slowly out of the spouts)	The ground coffee is pressed down too firmly.	Press the ground coffee down less firmly.
	Excessive ground coffee in the filter	Add proper amount of ground coffee and tamp firmly until the powder cake is level with the MAX line
	The ground coffee is too fine.	Adjust the ground coffee coarser.
	The holes of the 1 cup of 2 cups filter are blocked.	Remove the powder bowl and clean it
The coffee is not hot	Limescale in the water circuit.	Descale as described in section “Descaling” .
	the machine is not well primed by pulling a shot through the group head and the portafilter without ground coffee.	Pre-heat the group head and portafilter by running a shot without ground coffee.
Grinder is making a loud noise	Blockage or foreign object in grinder	Remove hopper, check for debris or blockage. If necessary, clean and clear grinder chamber and chute.

DISMANTLING

- Taking the machine out of use must be done by authorized staff. The pressure of the water circuit must be fully lowered; the power cord disconnected and any substances potentially harmful to the environment must be disposed of legally and properly.
- Keep the machine out of the reach of children or unqualified persons. If the machine is to be disposed as waste, it must be taken to a centre authorized for recycling electrical and electronic equipment (*). This is to protect the environment and humans from any possible harm. For more information about recycling please contact the offices of the municipality concerned, the domestic waste disposal service or the retailer.
- Do not dispose of the material in the environment.

ADDITIONAL WARNINGS

If the plug of the machine does not fit into the socket have the plug changed by a qualified person who should also make sure that the section of the wires of the plug are suitable for the power absorbed by the machine. The use of adaptors, multiple sockets and/or extension cords is not advised. If they have to be used it is necessary to use only simple or multiple adaptors and extension cords compliant with the safety regulations in force and to make sure the capacity limit is not exceeded.



- There are basic rules to be observed when using electrical equipment. In particular;
- do not touch or use the equipment with wet or damp hands or in bare feet;
- do not pull on the power lead or the equipment itself for unplugging it;
- do not allow the equipment be used by children or unskilled persons without supervision.
- If the machine is broken or not working properly, shut it off and do not tamper with it. If repairs are needed, only go to an authorised dealer. Non-compliance with the foregoing could affect the safety of the machine.

If you decide not to use the machine any more, you must put it out of commission by cutting the power cord, after unplugging the plug from the socket. It is also advisable to make safe any parts of the machine that could be a danger, especially for children who might play with the unused machine.

Installation must be done according to the manufacturer's instructions. Improper installation can cause harm to persons, animals or things, for which the manufacturer cannot be held responsible.

- To avoid dangerous overheating, it is advisable to unwind the whole power cord and only to use the machine as advised in the "Instructions for Use" section.
- If the power cord of the machine is damaged it must only be replaced by the authorized dealer.
- The manufacturer cannot be held responsible for any harm to persons, animals or things arising from improper and unreasonable use of the machine and for repairs done by unqualified persons.

SCISHARE

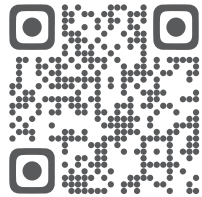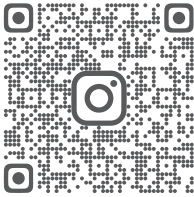

NINGBO SCISHARE TECHNOLOGY CO.,LTD.

NO. 158 KAIFA ROAD(EAST) ,ZHOUXIANG TOWN, CIXI CITY,
ZHEJIANG PROVINCE CHINA